
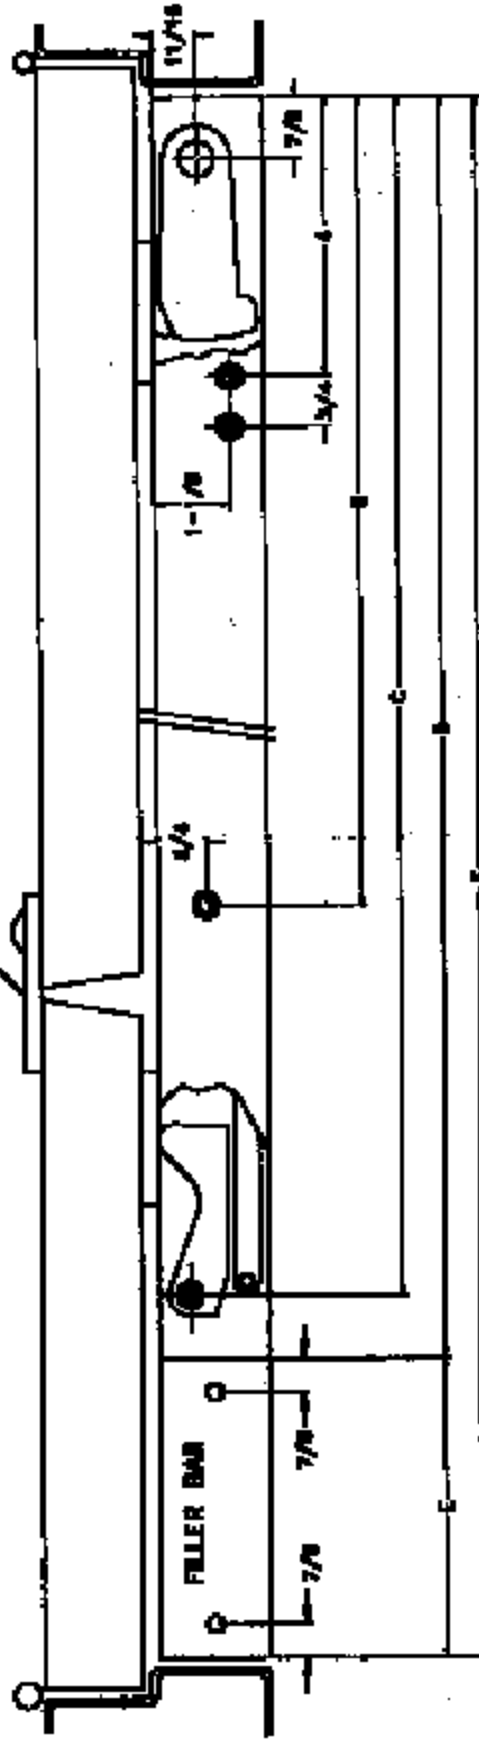


# 2000 SERIES COORDINATORS

1. CLOSE DOOR AGAINST STOP. LOCATE ACTIVE & INACTIVE DOOR STRIKES AS SHOWN BELOW.
2. LOCATE COORDINATOR AS SHOWN BELOW. INSTALL COORDINATOR WITH (1) 10-32 M.S. OR #10 WOOD SCREW TO HOLD STOP IN POSITION BEFORE DRILLING OTHER HOLES.
3. IF REQUIRED, INSTALL FILLER BAR IN GAP BETWEEN END OF COORDINATOR AND INACTIVE DOOR STOP.


Housing Length	A	B	C	E
32" (2010)	27-1/2"	Omit	31"	Varies with F Dim.
52" (2020)	47-1/2"	27-5/8"	51"	
60" (2030)	55-1/2"	27-5/8"	59"	

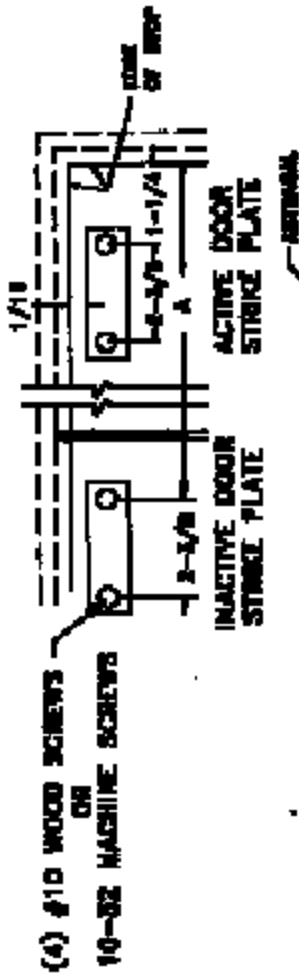

LOOSEN TENSION ADJUSTMENT TURN CLOCKWISE TO INCREASE TENSION USING PHILLIPS HEAD SCREW DRIVER

REINFORCING (OPTIONAL)

STOP WIDER THAN 1-5/8"

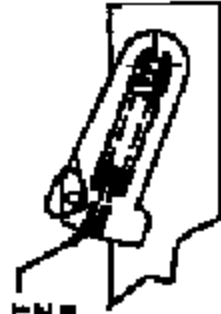

2000 Series

**DONJO** MFG., INC.